



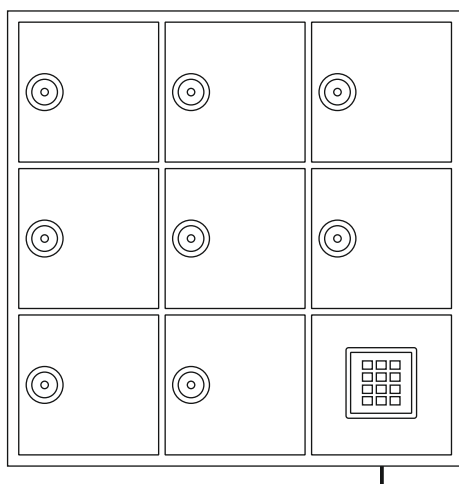

Po wyjęciu z opakowania proszę otworzyć kluczem skrytkę z klawiaturą.

W tej skrytce znajduje się zasilacz 230/12V 2A

Po włączeniu zasilacza do gniazda 230V depozytor zacznie działać.

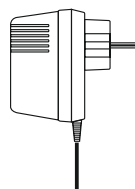

Skrytki można otworzyć:

- kodami testowymi (tak jak będą to robili goście)

- 1 skrytka - kod **1000** oraz #
- 2 skrytka - kod **2000** oraz #
- 3 skrytka - kod **3000** oraz #
- 4 skrytka - kod **4000** oraz #
- 5 skrytka - kod **5000** oraz #
- 6 skrytka - kod **6000** oraz #
- 7 skrytka - kod **7000** oraz #
- 8 skrytka - kod **8000** oraz #

- zbliżeniem breloka

- kartą personelu

- 1 skrytka - zbliżenie karty i naciśnięcie klawiszy **1** oraz #
- 2 skrytka - zbliżenie karty i naciśnięcie klawiszy **2** oraz #
- 3 skrytka - zbliżenie karty i naciśnięcie klawiszy **3** oraz #
- 4 skrytka - zbliżenie karty i naciśnięcie klawiszy **4** oraz #
- 5 skrytka - zbliżenie karty i naciśnięcie klawiszy **5** oraz #
- 6 skrytka - zbliżenie karty i naciśnięcie klawiszy **6** oraz #
- 7 skrytka - zbliżenie karty i naciśnięcie klawiszy **7** oraz #
- 8 skrytka - zbliżenie karty i naciśnięcie klawiszy **8** oraz #

Pomyłka przy wpisywaniu kodu - proszę nacisnąć *

UWAGA:

Dopiero po zainstalowaniu depozytora i sprawdzeniu działania proszę zmienić kody testowe, breloki i karty przy pomocy programu Hotel_S

Router MR-3420 - ustawienia jeżeli został zakupiony razem z depozytorem:

Konfiguracja:



adres IP: 192.168.0.1
hasło: elarm

Sieć Wi-Fi

nazwa sieci: elarm
hasło: jest na naklejce po spodem obudowy

Zakupiony depozytor ma ustawiony adres IP 192.168.0.107

Adres IP depozytora można zmienić przy pomocy programu **config_elarm_IP** który jest na płycie instalacyjnej.

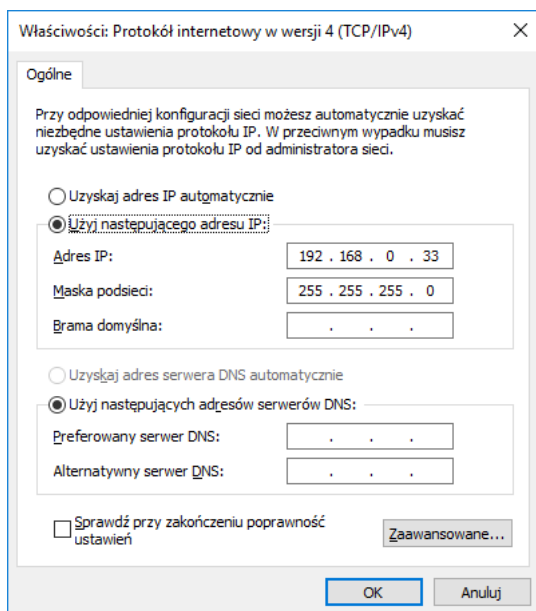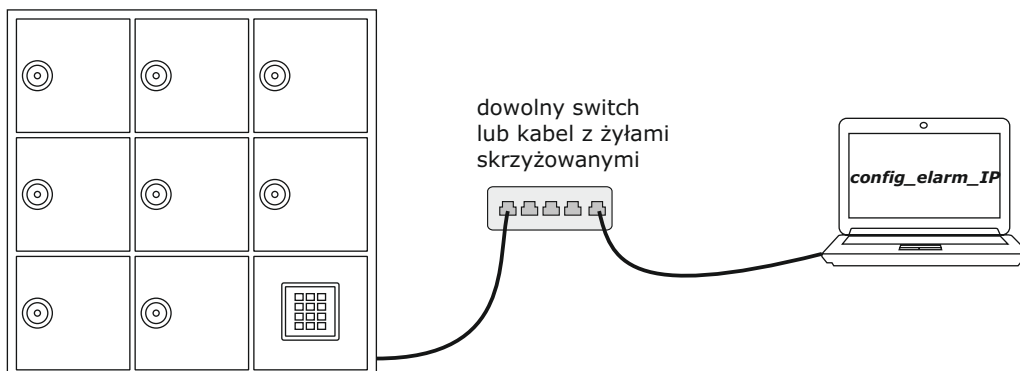

Komputer (laptop) przy pomocy którego będzie zmieniany adres IP powinien mieć ustawiony stały adres IP **192.168.0.33**


zmiana adresu IP depozytora wymaga przełożenia zworki w pozycję PROG



po przełożeniu zworki płyta ma adres IP 192.168.0.100

będzie odpowiadała na polecenie

ping -a 192.168.0.100

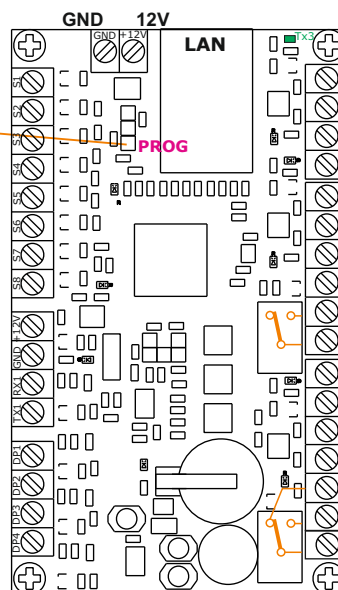

adres IP

Port
 1007

Zmień IP Sprawdź IP

adres tego komputera : 192 . 168 . 0 . xxx
 (proszę nie ustawiać : 192 . 168 . 0 . 100)

zwora na płycie w położeniu PROG

po uruchomieniu programu config_elarm_IP proszę wpisać nowy adres IP np. 10.10.15.22 i wcisnąć Zmień IP

Klawisz Sprawdź_IP wyświetli informację czy adres IP depozytora został zmieniony

Uwaga:

Proszę nie zmieniać numeru portu - powinien być **1007**

Po zmianie adresu proszę

- przełożyć zworę w pozycję PRACA
- odłączyć na 30 sekund zasilanie płyty depozytora
- odłączyć i ponownie uruchomić komputer

Po podłączeniu depozytora do sieci komputerowej będzie odpowiadał na polecenie ping np. *ping -a 10.10.15.22*

W programie **Hotel_S Konfiguracja** - proszę wpisać zmieniony adres IP i wcisnąć klawisz **Zmień IP**

Połącz z depozytorem **Zmień IP** 10.10.15.22 Usuń zdarzenia starsze niż: Kopia bazy Koniec

17.06.2018

Linia	Nazwa	Stan	Data	Godzina	Urządzenie
0	depozytor				


Konfiguracja routera TL MR3420





komputer powinien być połączony kablem z jednym z żółtych gniazd routera MR3420




W przeglądarce proszę wpisać adres fabryczny IP który jest podany w ulotce lub naklejce na spodzie obudowy 192.168.

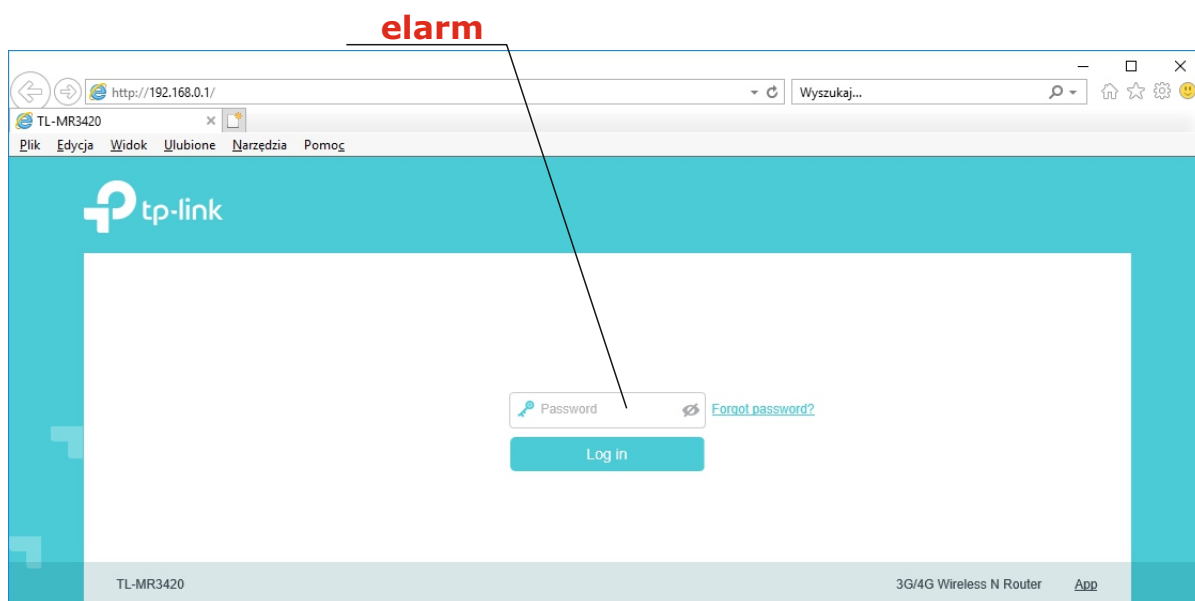

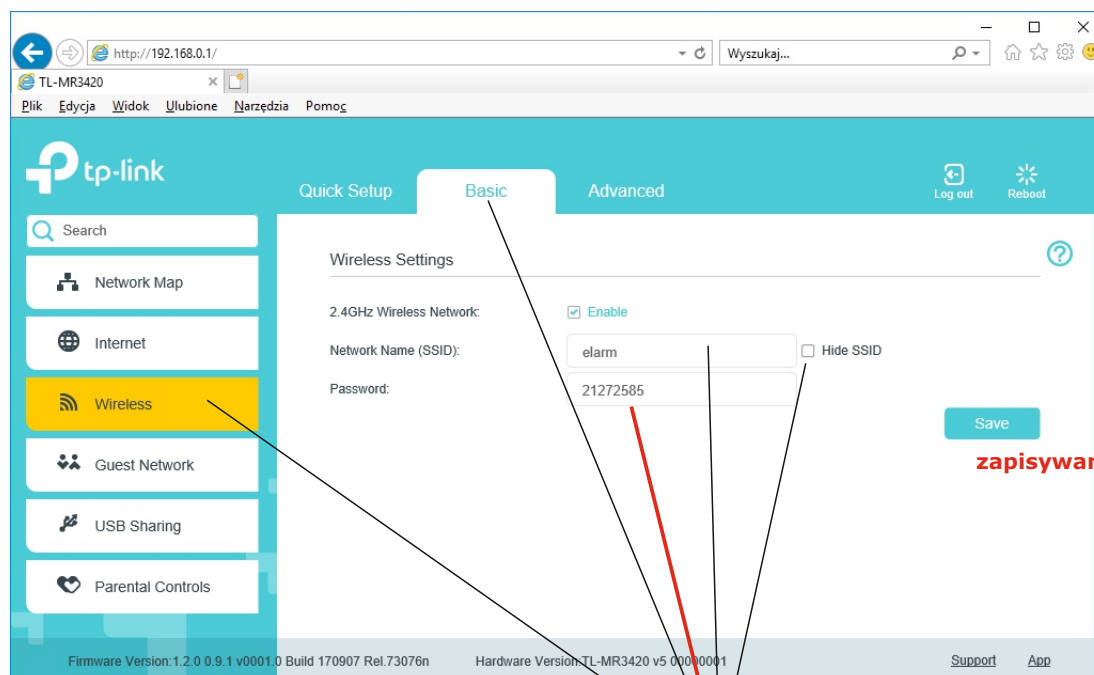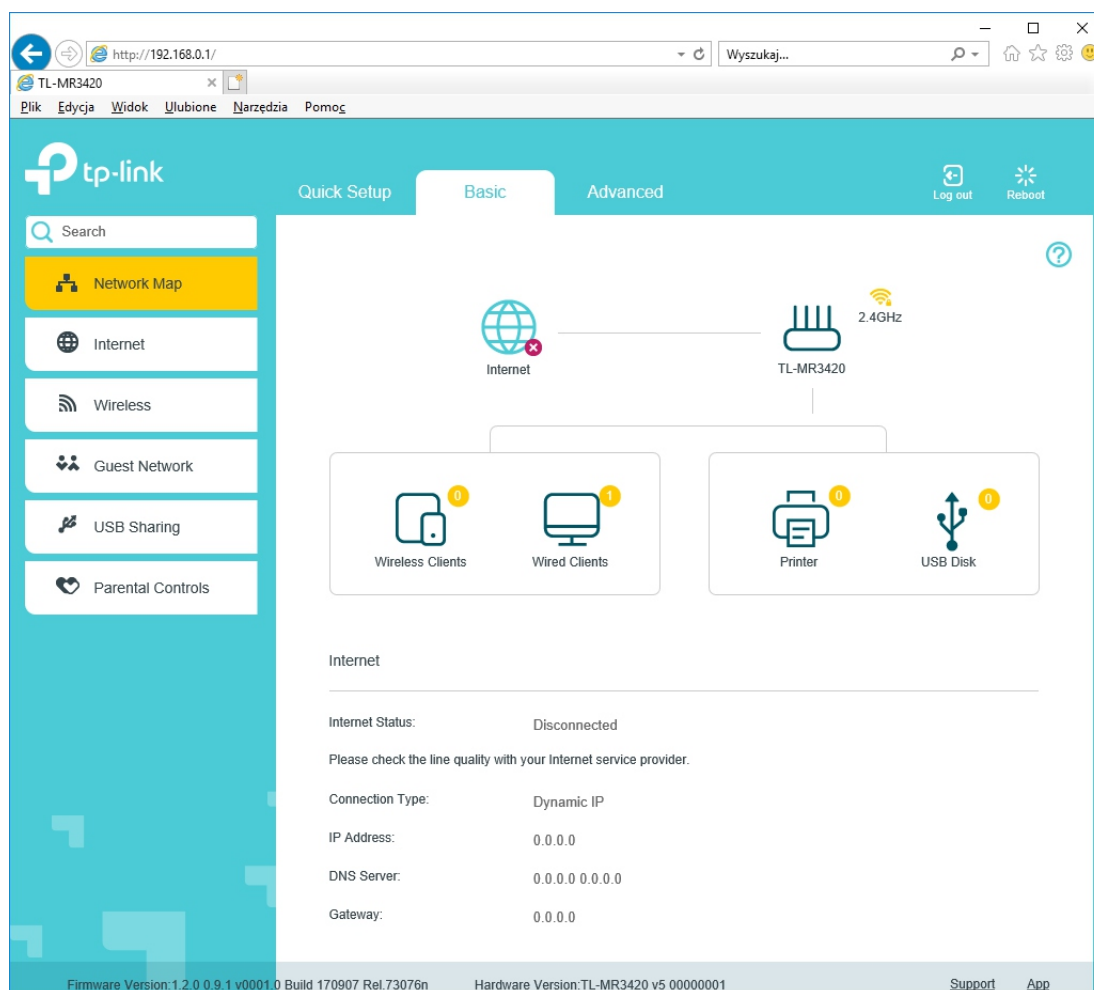

ustawienia hasła do konfiguracji routera przez przeglądarkę

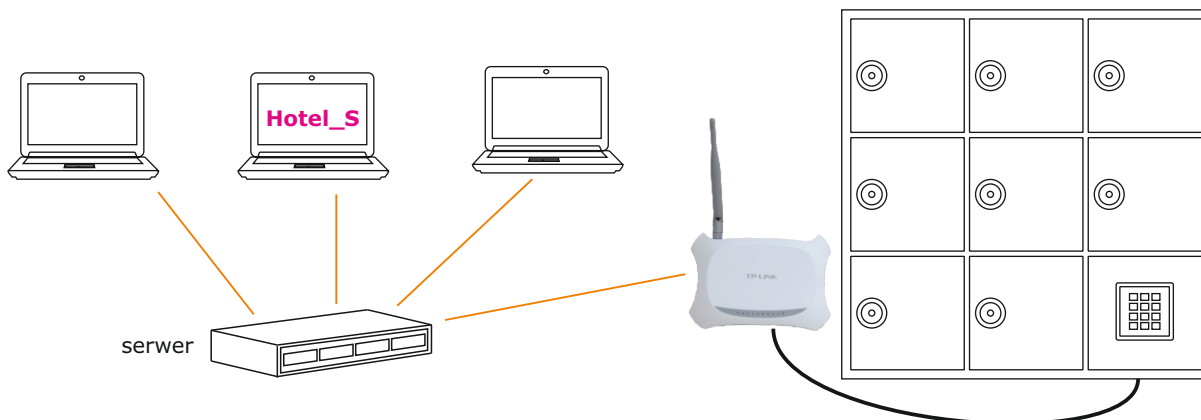

Połączenie depozytora z istniejącą siecią hotelową z wykorzystaniem routera Wi-Fi



kabel czarny - włączony do gniazda LAN (pomarańczowe)
połączenie z depozytorem

kabel szary - włączony do gniazda WAN (niebieskie)
połączenie z siecią hotelową

W programie Hotel_S Konfiguracja należy zmienić adres IP
Nie trzeba zmieniać adresu IP depozytora

Połącz z depozytorem	Zmień IP	10.10.15.22	Usuń zdarzenia starsze niż:	Kopia bazy	Koniec
			17.06.2018		
Linia	Nazwa	Stan	Data	Godzina	Urządzenie
0	depozytor				

Quick Setup

Basic

Advanced

Log out

Reboot

Search

Status

Operation Mode

Network

Wireless

Guest Network

NAT Forwarding

USB Sharing

Parental Controls

Bandwidth Control

Security

VPN

System Tools

Internet

IPv4 | IPv6

WAN Interface Name: ewan_ipoe_s

MAC Address: 70:4F:57:F3:32:63

IP Address: 10.10.15.22

Subnet Mask: 255.255.255.0

Default Gateway: 10.10.15.1

Primary DNS: 10.10.15.1

Secondary DNS: 0.0.0.0

Connection Type: Static IP

Wireless

2.4GHz

Network Name (SSID): TP-Link_3262

Wireless Radio: On

Mode: 802.11bgn mixed

Channel Width: Auto

Channel: Auto(11)

MAC Address: 70:4F:57:F3:32:62

LAN

IPv4 | IPv6

MAC Address: 70:4F:57:F3:32:62

IP Address: 192.168.0.1

Subnet Mask: 255.255.255.0

DHCP: On

Guest Network

2.4GHz

Network Name (SSID): TP-Link_Guest_3262

Hide SSID: Off

Wireless Radio: Off


Allow Guests to Access Each Other: On

Firmware Version: 1.2.0.0.9.1 v0001.0 Build 170907 Rel.73076n

Hardware Version: TL-MR3420 v5 00000001

Support

App

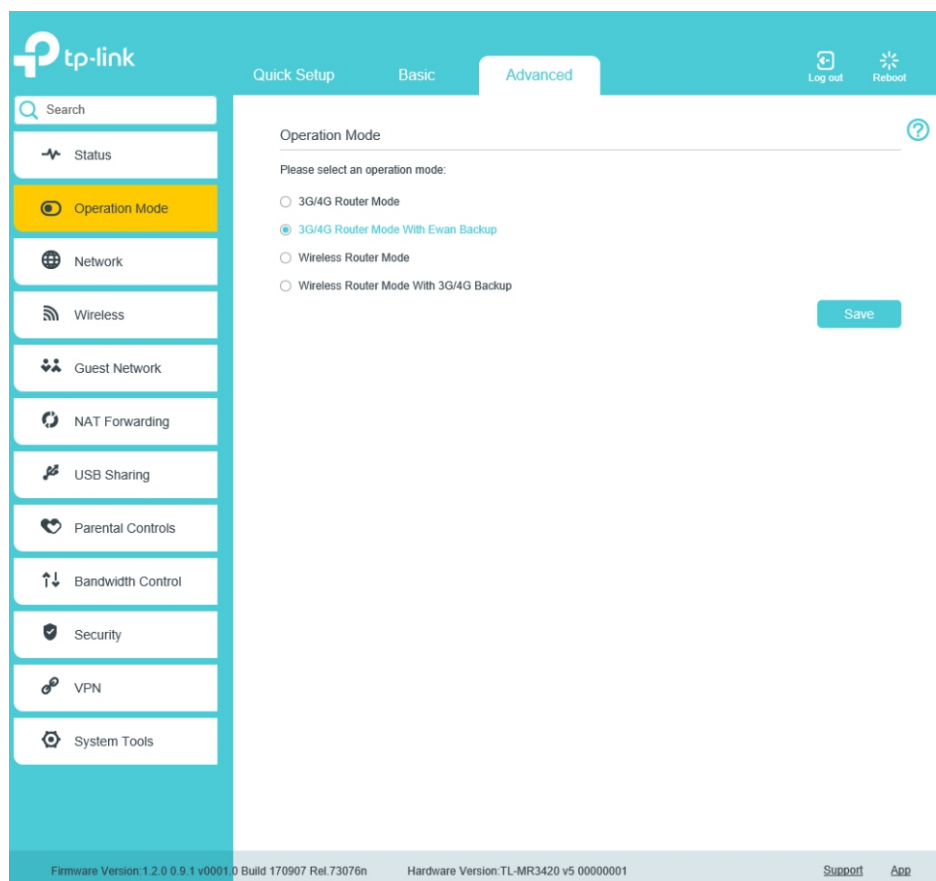

The screenshot shows the TP-Link Advanced Setup page for the Operation Mode. The left sidebar contains a search bar and a list of menu items: Status, Operation Mode (highlighted), Network, Wireless, Guest Network, NAT Forwarding, USB Sharing, Parental Controls, Bandwidth Control, Security, VPN, and System Tools. The main content area is titled 'Operation Mode' and asks the user to select an operation mode. There are four radio button options: '3G/4G Router Mode', '3G/4G Router Mode With Ewan Backup' (which is selected), 'Wireless Router Mode', and 'Wireless Router Mode With 3G/4G Backup'. A 'Save' button is located at the bottom right of the main content area. The footer displays the firmware version (1.2.0.0.9.1 v0001.0 Build 170907 Rel.73076n), hardware version (TL-MR3420 v5 00000001), and links for support and the app.

tp-link

Quick Setup Basic **Advanced** Log out Reboot

Search

Status

Operation Mode

Network

Wireless

Guest Network

NAT Forwarding

USB Sharing

Parental Controls

Bandwidth Control

Security

VPN

System Tools

Operation Mode

Please select an operation mode:

☐ 3G/4G Router Mode

☒ 3G/4G Router Mode With Ewan Backup


☐ Wireless Router Mode

☐ Wireless Router Mode With 3G/4G Backup

Save

Firmware Version: 1.2.0.0.9.1 v0001.0 Build 170907 Rel.73076n Hardware Version: TL-MR3420 v5 00000001 Support App

Przykład: depozytor w sieci hotelowej będzie miał adres 10.10.15.22

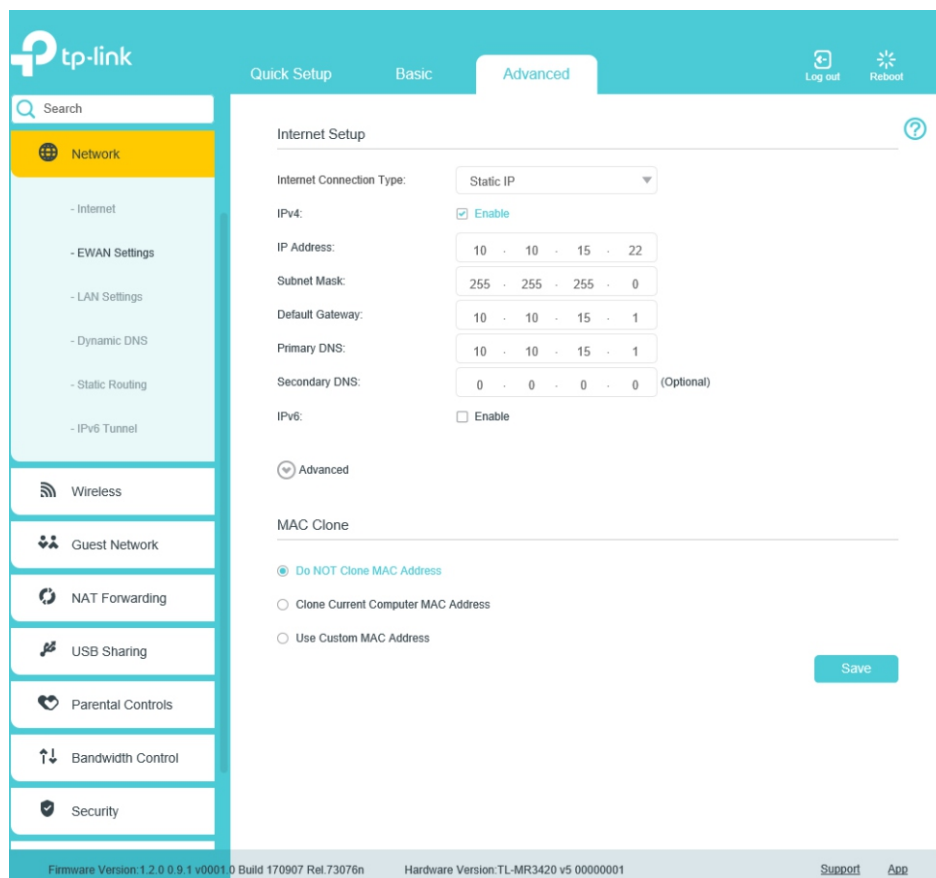

The screenshot shows the TP-Link Advanced Setup page for the Internet Setup. The left sidebar is the same as the previous page, but the 'Network' menu item is highlighted. The main content area is titled 'Internet Setup' and shows the 'Internet Connection Type' set to 'Static IP'. The 'IPv4' section is expanded, showing fields for IP Address (10.10.15.22), Subnet Mask (255.255.255.0), Default Gateway (10.10.15.1), Primary DNS (10.10.15.1), and Secondary DNS (0.0.0.0). The 'IPv6' section is collapsed. The 'MAC Clone' section is expanded, showing the 'Do NOT Clone MAC Address' option selected. A 'Save' button is located at the bottom right of the main content area. The footer displays the same firmware and hardware version information as the previous page.

tp-link

Quick Setup Basic **Advanced** Log out Reboot

Search

Network

- Internet

- EWAN Settings

- LAN Settings

- Dynamic DNS

- Static Routing

- IPv6 Tunnel

Wireless

Guest Network

NAT Forwarding

USB Sharing

Parental Controls

Bandwidth Control

Security

Internet Setup

Internet Connection Type: Static IP

IPv4: ☒ Enable

IP Address: 10 - 10 - 15 - 22

Subnet Mask: 255 - 255 - 255 - 0

Default Gateway: 10 - 10 - 15 - 1

Primary DNS: 10 - 10 - 15 - 1

Secondary DNS: 0 - 0 - 0 - 0 (Optional)

IPv6: ☐ Enable

Advanced

MAC Clone

☒ Do NOT Clone MAC Address

☐ Clone Current Computer MAC Address

☐ Use Custom MAC Address

Save

Firmware Version: 1.2.0.0.9.1 v0001.0 Build 170907 Rel.73076n Hardware Version: TL-MR3420 v5 00000001 Support App